 




www.po-selected.com



PO:

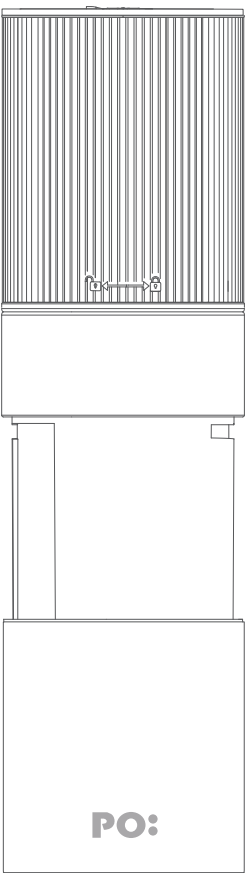 


Portable Size Electric Coffee Bean Grinder

使用說明書


為了避免對您和他人的安全或財產造成損害，請仔細閱讀用戶手冊，並正確安全地使用產品。

產品詳情

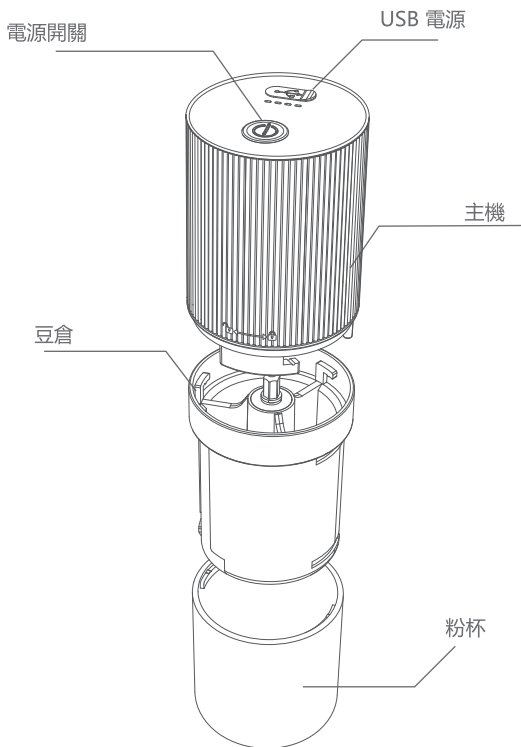

使用說明書

 調整研磨粗細

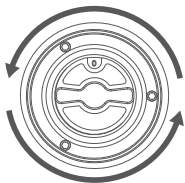

1. 順時針旋轉至最細極限，直到無法繼續旋轉，此為原點。
2. 基於原點，逆時針旋轉N格來調整研磨粗細。

參考以下圖表，不同萃取方法所需的格數：


Based on Origin Point

原點	濃縮咖啡	6 - 15 格
	摩卡壺	10 - 20 格
	手沖	20 - 30 格
	法式壓濾	30 - 40 格

注意


- 研磨粗細圖表基於經驗估計，僅供參考；
- 請根據實際情況調整；
- 調整研磨粗細時必須安裝電機；
- 過度逆時針旋轉可能導致研磨核心結構解體。

 使用說明書

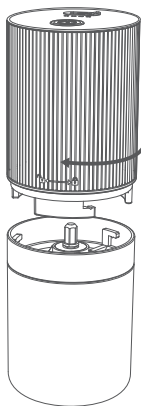


1. 按照主機上箭頭指示的方向旋轉主機，打開豆倉。

 2. 放入適量的咖啡豆，然後將其轉回以牢固鎖定豆倉。

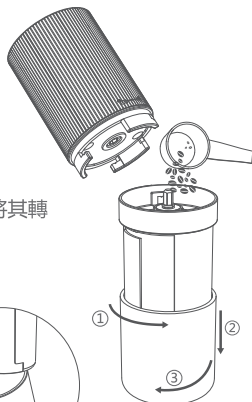

 3. 將粉杯對準定位槽，放置到指定位置。
按下電源開關一次，開始研磨。

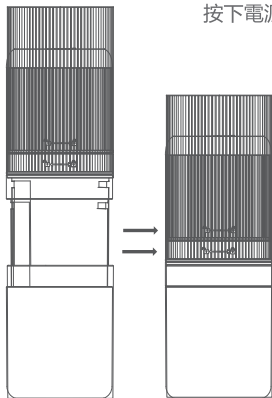

4. 產品完成工作後，按照步驟2將粉杯歸位。確保粉杯清潔後再存放。

使用說明書

LED指示燈說明

1. 充電狀態

 
- 充電時，藍色LED燈會逐個閃爍；
- 充滿電後，所有四個藍色LED燈將保持常亮。

2. 工作狀態

- 工作時，藍色LED燈保持常亮，每盞燈代表25%的電量；
- 電量低時，第一個藍色LED燈會閃爍，產品將自動關閉。

3. 其他狀態

- 按下電源按鈕開啟產品，藍色LED燈會亮起，電機啟動。如果未檢測到咖啡豆，產品將在6秒後自動關閉；
- 如果按下電源按鈕時所有四個藍色LED燈同時閃爍，則需要充電後才能開啟；
- 充電時無法使用產品。

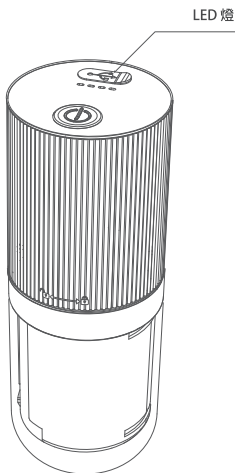

使用說明書

注意事項

- 充電時請勿使用產品；
- 使用前確保豆倉和粉杯正確安裝；
- 定期清潔粉杯和豆倉以保持產品性能。
- 本電器不預期供生理、感知、心智能力經驗或知識不足之使用者使用(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。
- 孩童應受監護，以確保孩童不嬉玩電器。
- 一般家庭使用。
- 僅提供標示於電器之超低安全電壓。

產品詳情

產品名稱	丹麥咖啡電動磨豆機
電池	鋰電池 800 mAh
重量	約420克
充電時間	約90分鐘
使用次數	20-25次
尺寸	φ56mm * h150mm
豆倉容量	約20克
材質	鋁合金、ABS、不鏽鋼
產品電流	充電電流 1A
電機轉速	60 RPM
產品電壓	充電電壓 5V
配件	刷子 + 數據線

注意

- ① 請勿直接用水沖洗主機；
 - ② 長時間不使用時，請清潔豆倉；
 - ③ 本產品適用於淺、中、深度烘焙的咖啡豆。
- ※ 產品規格如有變更，恕不另行通知。

 
電池注意事項：

- 在電器報廢前應取出電池。
- 應安全地丟棄電池。
- 取出電池前電器應切斷電源。

Usage Instructions

To avoid harm to your safety and others' safety or property damage, please read the user manual carefully and use the product correctly and safely.

Coffee Bean Grinder Product details

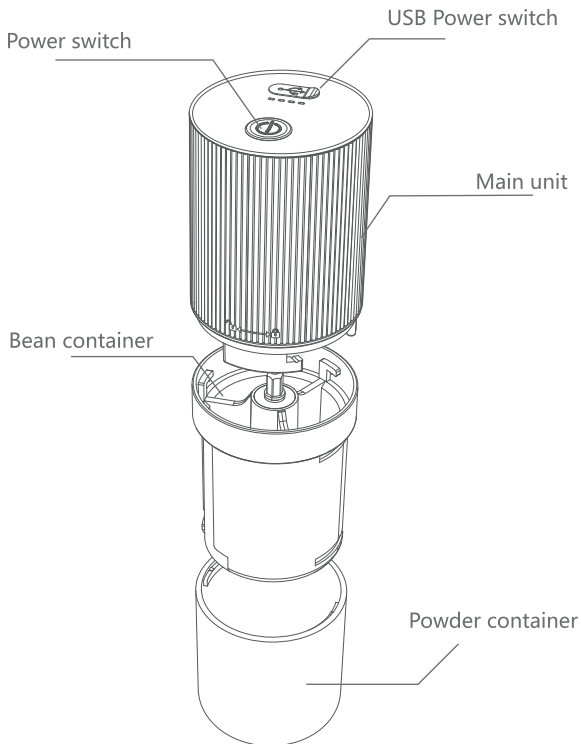




www.po-selected.com



 
PO:

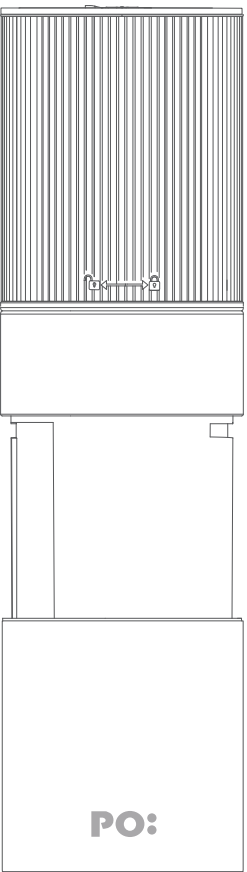


Stainless Steel Conical Coffee Grinder Burr

Electric Coffee Bean Grinder 2.0


 
Usage Instructions

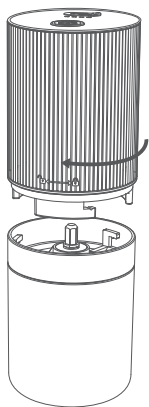


 
1. Turn the main unit in the direction indicated by the arrow on the main unit to open the bean container.

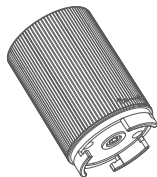

  2. Put in the desired amount of coffee beans , then turn it back to securely lock the bean container.

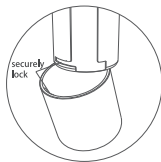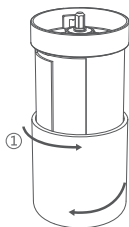

  
3. Align the powder cup with the positioning groove as indicated, and place the powder cup in the position . Press the power switch once to start grinding.



4. After the product has finished working, follow the steps in step 2 to return the powder cup to its stored position. Ensure the powder cup is cleaned before storing it.

Usage Instructions

 Adjusting Grind Size

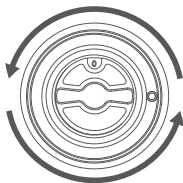

- Rotate clockwise to the finest limit until it cannot rotate further; this is the origin point.
- Based on the origin point, rotate counterclockwise by N notches to adjust the grind size.

Refer to the following chart for the number of notches required for different extraction methods:

Based on Origin Point	Espresso	6 - 15 notches
	Moka Pot	10 - 20 notches
	Pour Over	20 - 30 notches
	French Press	30 - 40 notches

- The grind size chart is based on empirical estimates and is for reference only;
- Please adjust according to actual conditions.
- The motor must be installed when adjusting the grind size.
- Excessive counterclockwise rotation may disassemble the grinding core structure.

Usage Instructions

LED Indicator Instructions

1.Charging Status

 
- During charging, the blue LED lights will flash one by one.
- When fully charged, all four blue LED lights will remain lit.

2.Operating Status

- During operation, the blue LED lights will remain lit, with each light representing 25% of the battery level.
- When the battery is low, the first blue LED light will flash, and the product will automatically shut down.

3.Other Statuses

- Press the power button to turn on the product. The blue LED lights will illuminate, and the motor will start. If no coffee beans are detected, the product will automatically shut down after 6 seconds.
- If all four blue LED lights flash simultaneously when pressing the power button, the product needs to be charged before it can be turned on.
- The product cannot be used while charging.

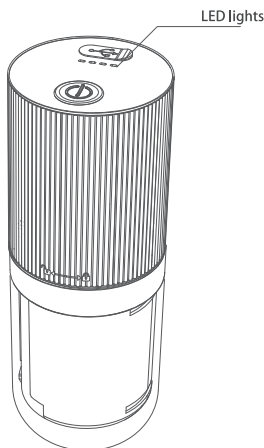

Usage Instructions

Precautions

- Do not use the product while charging.
- Ensure the bean hopper and powder cup are properly installed before use.
- Regularly clean the powder cup and bean hopper to maintain product performance.

Product Details

Product Name	Portable Electric Coffee Grinder
Battery	Lithium Battery 800 mAh
Weight	Approximately 420 grams
Charging Time	Approximately 90 minutes
Usage Count	20-25 times
Dimensions	φ56 mm*h150mm
Bean Capacity	Approximately 20g
Material	Aluminum Alloy, ABS, Stainless Steel
Product Current	Charging Current 1A
Motor Speed	60 RPM
Product Voltage	Charging Voltage 5V
Accessories	Brush + Data Cable

Note:

- ① Do not rinse the main unit directly with water.
- ② Clean the bean hopper when not in use for an extended period.
- ③ This product is suitable for light, medium, and dark roast coffee beans.

※ Product specifications are subjected to change without notice.